


Stage1: Separate the inner rail from outer rail

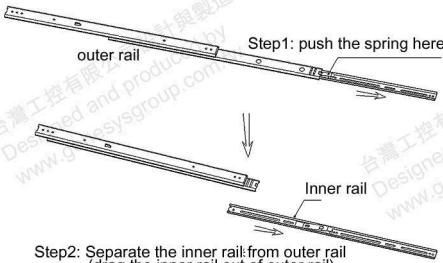


outer rail

Step1: push the spring here

Inner rail


Step2: Separate the inner rail from outer rail (drag the inner rail out of outer rail)

Stage2: Install the inner rail with two sides of chassis first

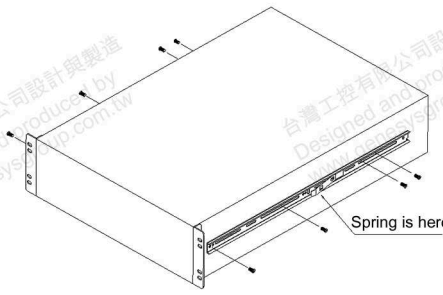


Spring is here

Stage3: Outer rail assembly

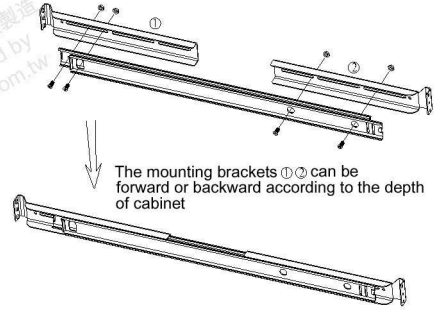


The mounting brackets ①② can be forward or backward according to the depth of cabinet


Stage4: Outer rail installed with cabinet in advance

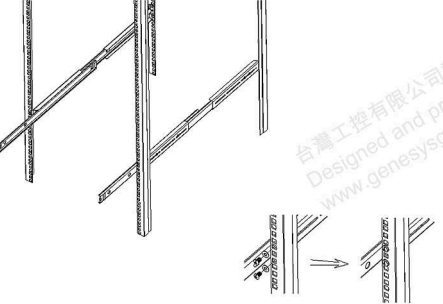

Stage5: Push in the chassis (inner rail installed) to the cabinet

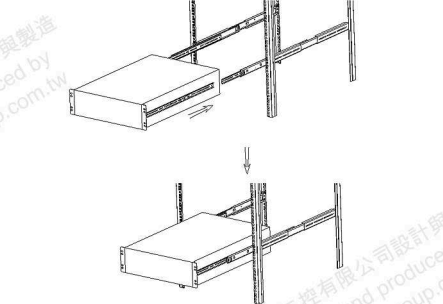

Stage6: Stacked brackets (standard part) for some 2U/4U cases

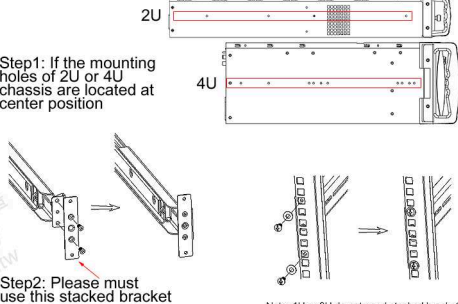

2U

4U

Step1: If the mounting holes of 2U or 4U chassis are located at center position

Step2: Please must use this stacked bracket

Note: 1U or 3U do not need stacked bracket

Military-Class Slide Rail for 1U 2U 3U 4U chassis
Durable for 65 KGM (143 pounds/lbs)

容許公差: TOLERANCES:	材料規格: MATERIAL:	品名: NAME:	料號: PART NO:		
.XXX ±.025	核准者: APPROVE BY:	日期: DATE:	Military-Class Slide Rail Installation Guidance		
.XX ±.100	Robert Roan	April 24, 2012	NJ-600		
.X ±.250	審核者: CHECK BY:	日期: DATE:	圖號: DRAW NO:	櫃號: FILE NO:	
投影法: PROJECTION:	Jun Chen	April 13, 2012	單位: UNITS:	版次: REV. NO:	編號: SHEET:
第三角法	繪圖者: DRAW BY:	日期: DATE:	mm	0.0	
	Randy Lee	April 12, 2012			

